



1852422

Kingston Dining Table

Parts and Hardware List

A.	Top Assembly	1 pc
B.	Legs	4 pcs
C.	Leaf Panels	2 pcs

- * Please make sure that you have all the parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.



1852422

Kingston Dining Table

Assemble Legs & Leaves

Parts required

A. Top Assembly	1 pc	C. Leaf Panels	2 pcs
B. Legs	4 pcs		

1. **Attach the Legs (B).** Place the Top Assembly (A) upside down on the floor. Insert the exposed threads of the Legs (B) into the pre-threaded holes in the corner blocks of the Top Assembly (A). Secure the Legs (B) by turning in a clockwise direction. See Illustration # 1.
2. **Insert the Leaf Panels (C).** Turn the table upright. First “UNLOCK” the sash locks on underside of the tabletop by turning counter-clockwise and slide the tabletop apart. Aligning the exposed metal pins with the metal pinholes, insert the Leaf Panels (C). Slide the tabletop back together into position. Secure the Leaf Panels (C) by turning the sash lock clockwise into “LOCK” position. See Illustration # 2.
3. **Remove Leaf Panels (C).** “UNLOCK” the sash lock by turning counter-clockwise. Slide the tabletop apart and remove the Leaf Panels (C). Slide the tabletop back together into position. Secure tabletop by turning the sash lock clockwise into “LOCK” position. See Illustration # 2.

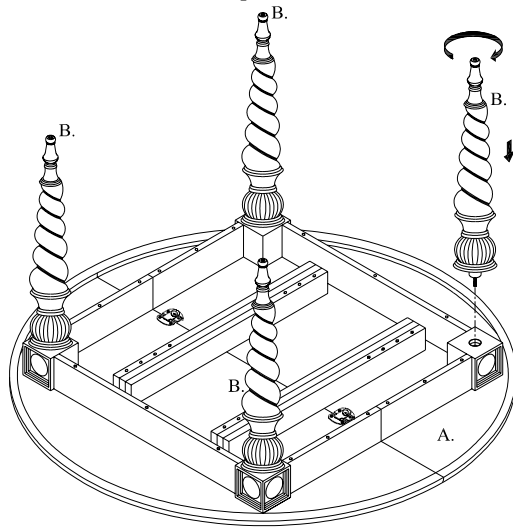


Illustration # 1

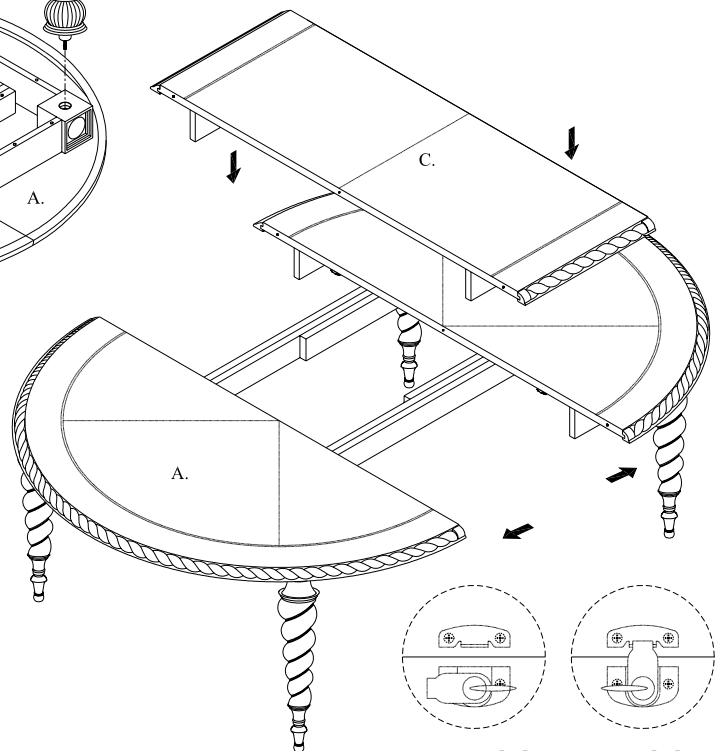


Illustration # 2

UNLOCK

LOCK